

*Let Us Make
Your Next Special
Event Memorable*



*Weddings - Birthdays
Celebrations
Corporate Events*

Cotton Candy Machine Operating & Cleaning Instruction

Install the bowl on top of the base using the 4 clamps located on the sides of the base.
Make sure the bowl is not in contact with the heating head.
Connect the power cord to the base and plug it into a grounded outlet.
Switch both the "power" and "heat" switches to the ON position.
Both switches will light up when turned on.
Allow the machine 15 minutes to heat prior to use.
Add floss sugar directly into the well in the heating head using the floss scoop.
DO NOT OVERFILL.
Cotton candy will begin to spin around the bowl as the heater head continues to operate.
As the cotton candy accumulates, it will build up and come out through the top of the spinner head.
You will need to collect the cotton candy as it comes out of the top of the unit.
Allow the machine to cool down for 15-20 minutes after an hour of continuous use.

DO NOT DISASSEMBLE MACHINE.
Turn off all switches and unplug the unit.
Allow the heating head to cool before cleaning.
Remove floss net and wash with soap and water.
Clean the bowl using a damp cloth.

I have read and understand these Operating and Cleaning Instructions for the Cotton Candy Machine.

Renter's Signature & Date _____

***9838 Emerald Park Dr. Elk Grove, CA. 95624 / Phone (916) 869-7769
www.arenapartyrentals.com / email: arenapartyrental@gmail.com***