Let Us Make Your Next Special Event Memorable



## **Snow Cone Machine Operating & Cleaning Instruction**

Turn POWER switch ON.

Fill the ice horn with ice.

Press and hold the MOTOR switch to activate blades and begin shaving ice.

While holding MOTOR switch down, apply steady downward pressure to the ice pusher. Release the MOTOR switch when finished.

Remove all ice from the ice horn and storage compartment.

Operate the motor for several minutes to remove any water collection on the cutter head. Turn off the POWER switch.

Unplug the power cord from the electrical outlet.

Using a damp cloth, wipe down the following items.

The inner surface of the ice horn

The outside surface of the ice horn

- The ice pusher
- All interior and exterior surfaces

To clean the water collection tray.

Tilt tray to drain the water trapped in the drain cavity

Slip the drain hose off the nipple fitting.

Lift the tray out of the cabinet.

Clean tray and area below tray with clean cloth.

I have read and understand these Operating and Cleaning Instructions for the Snow Cone Machine.

Renter's Signature & Date

## 9838 Emerald Park Dr. Elk Grove, CA. 95624 / Phone (916) 869-7769 www.arenapartyrentals.com / email: <u>arenapartyrental@gmail.com</u>